Installation Manual: ID-4 4 Key Compact Controller

NOTE: Do not install and/or operate this product unless you have read and understand all the safety information and instructions contained in this manual.

IMPORTANT!

This manual provides all the necessary information for your product to be properly and safely installed. Please read all instructions before installation, and make sure you follow them carefully during the installation process. Failure to follow these instructions may result in DAMAGE to the product or vehicle, and/or SERIOUS INJURY to you and your passengers!

PI	Product Code	ID-4			
	Voltage	10-30 VDC			
	Output	0.2Amp per cable			
	IP Rating	IP65			
	Dimension	38mm X 75.8mm X 23.8mm			
	Options	Options - Adjustable Arm Mount - Motorcycle Handle-Bar Clamp			
P3 P4	Wiring Diagram	Button	Function	Amp	
	Red	-	Positive	-	
	Black	-	Negative	-	
	Yellow	P1	Output	0.2A	
	Yellow Blue	P1 P2	Output Output	0.2A 0.2A	

White

P4 Output 0.2A

Functions and Programming

Default				
	All buttons are default as ON/OFF Button			
Momentary Switch Programming				
Function	To set function buttons as momentary switch			
	 Push the button for 5 second to set as momentary switch. Push the button for another 5 second to set as momentary switch. 			

Adjustable Arm Mount	
	Installation Attach and secure the controller onto the panel stand. Place the device onto a clean desired surface, where it can be easily accessible to the user. Use the attached adhesive pad* to secure the device onto the surface. Should you wish to remove / re-locate the controller, you may use alcohol or similar cleaning formula to remove the left-over adhesive residue.
	* The supplied adhesive pad is designed for one time use. You may replace it with other double side adhesive tapes.



Manufacturer Limited Warranty Policy: Manufacturer warrants that on the date of purchase this product. This Limited Warranty extends for Thirty Six (**36**) months from the date of purchase.

DAMAGE TO PARTS OR PRODUCTS RESULTING FROM TAMPERING, ACCIDENT, ABUSE, MISUSE, NEGLIGENCE, UNAPPROVED MODIFICATIONS, FIRE OR OTHER HAZARD; IMPROPER INSTALLATION OR OPERATION; OR NOT BEING MAINTAINED IN ACCORDANCE WITH THE MAINTENANCE PROCEDURES SET FORTH IN MANUFACTURER'S INSTALLATION AND OPERATING INSTRUCTIONS VOIDS THIS LIMITED WARRANTY.