911 SIGNAL®

NR6

LOW PROFILE

WIRING

RED — For Power supply to +10-33V DC

BLACK — For Ground

GREEN — 50% Power

YELLOW
For Synchronization and Flash Patterns Alteration
- Connect YELLOW wires of all heads together for synchronization
- Flash patterns will be reseted when yellow-wireconnects to Red-wire more than 3seconds.

WHITE
For Simultaneous or AlternatingFlash
- Group 1 Heads:(WHITHE-Wire Connected to RED) will consecutively flash
- Group 2 Heads:(WHITHE-Wire not Connected to RED) will synchronously flash

BROWN — **LED Color 1 "+"**

RED — **LED Color 2 "+"**

BLACK — **GND**

GREEN — **50% Power**

YELLOW — **For Synchronization, flash pattern selection and reset**
- Connect the YELLOW wires fromeach lighthead together. Their patternswill be synchronized when the lightheads are activated.
- To advance to the next pattern,apply+VDC for lessthan 1second and release.
- To cycle backwards to the previous pattern,apply+VDC for 1 to 5 seconds.
- To reset to the factory steady 2pattern,apply+VDC for more than 5 seconds.

WHITE — **Alternation**
With the power off, connect the WHITE wire from one lighthead to + VDC and leave the other unconnected. Their patterns will alternate when the lightheads are activated.

SINGLE & SPLIT FLASH PATTERNS

1	Random (Default)	11	Single (All)
2	Single (Split)	12	Double (All)
3	Double (Split)	13	Quad (All)
4	Quad (Split)	14	Quint (All)
5	Quint (Split)	15	Ultra (All)
6	Ultra (Split)	16	Signle-Quad (All)
7	Signle-Quad (Split)	17	Single-H/L (All)
8	Single-H/L (Split)	18	Steady 2 (California)
9	ECE R65 Single (All)	19	Steady 4 (All)
10	ECE R65 Double (All)		

DUAL FLASH PATTERNS

1	Steady 2 (Default)	7	Double (All)
2	Steady 4 (All)	8	Quad (All)
3	Random (All)	9	Quint (All)
4	ECE R65 Single (All)	10	Ultra (All)
5	ECE R65 Double (All)	11	Single-Quad (All)
6	Single (All)	12	Single-H/L (All)

MOUNT

Install 1



Install 2

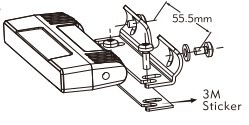

NR6T DUAL

Color Sheet of Wire and LED

LED Combinations \ WIRE	BROWN	RED
Opt.1	White	Red
Opt.2	White	Blue
Opt.3	White	Amber
Opt.4	Blue	Red
Opt.5	Blue	Amber
Opt.6	Red	Amber

911 Signal Technology Inc.

Add:Room 701-702,Hengwei Building,No.258, Tiangao Lane, Shounan Subdistrict,Yinzhou Area,Ningbo City, Zhejiang,China.

Tel: +86 574 89017911 +86 400 6757911
Fax: +86 574 82822560
Email: sales@911signal.com
Website: www.911signal.com